


Pavers Over ABC

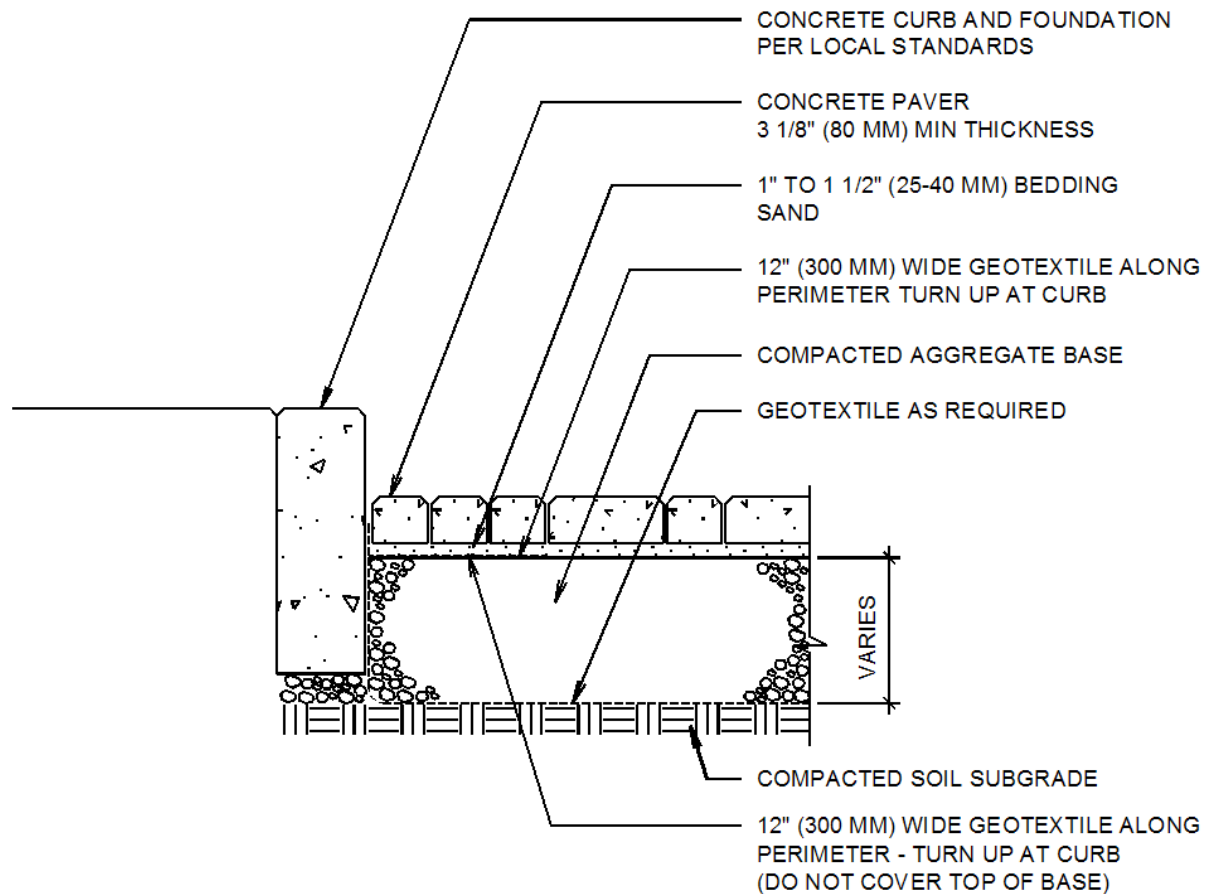

NOTES:

1. DRAIN PIPES BELOW THE BASE MAY BE NECESSARY IN SLOW DRAINING SOIL SUBGRADE.
2. BASE THICKNESS VARIES WITH TRAFFIC, CLIMATE, AND SUBGRADE CONDITIONS. COLDER CLIMATES AND WEAK SOILS MAY REQUIRE THICKER BASES. CONSULT ICPI TECH SPEC 4 TO DETERMINE BASE THICKNESS.
3. CONSULT ICPI TECH SPEC 2 FOR GUIDELINES AND SPECIFICATIONS FOR BASE MATERIALS, SUBGRADE SOIL AND BASE COMPACTION.
4. DO NOT COVER ENTIRE TOP OF AGGREGATE BASE WITH GEOTEXTILE.



Creating elegant hardscaping environments.

118 International Drive, Suite 101
Morrisville, NC 27560

800-292-7220

www.fredadampaving.com